


SUBJECT: INSTRUCTIONS FOR USE:

Two- Person Propane Tank Lifting Tool

Capacity: The tool has a rated load limit of 100 pounds.

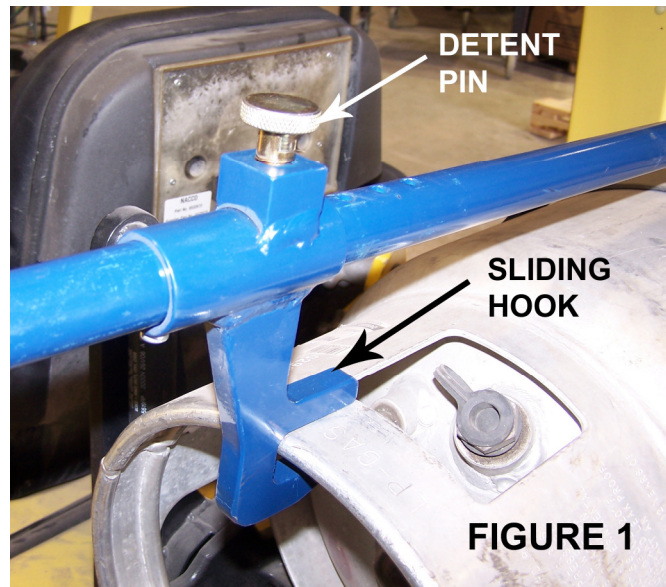

TWO PERSON PROPANE TANK LIFTING TOOL:

WARNING: Ensure the forklift or other equipment requiring tank replacement is turned off and the parking brake is set prior to attempting tank removal or installation.

1. Inspect the tool for defects. Both handle grips should be in place and in good condition. The sliding grab hook must move freely, and the spring loaded detent pin must be in place and working properly (Figure 1).
2. Tightly close the valve on the tank to be replaced and remove the tank retaining straps or other retaining mechanisms. Remove the hose from the tank.
3. Apply upward pressure to the detent pin to disengage the sliding grab hook. Move the grab hook outward on the handle bar to allow clearance to go over the propane tank (Figure 1).
4. Insert the fixed grab hook into the flange at one end of the tank. Apply upward pressure to the sliding grab hook detent pin and move the hook onto the flange on the other end of the tank. Release the detent pin, allowing it to seat in the handle bar. The pin must be fully seated before attempting to lift the tank (Figure 2).
5. Lift the propane tank off the forklift or other equipment and move it to its proper place of storage. Either two people, a crane, or a hook equipped forklift must be used to lift the tank (Figure 2).
6. Apply upward pressure to the detent pin to release the sliding grab hook. Move the hook outward to release the tank (Figure 1).

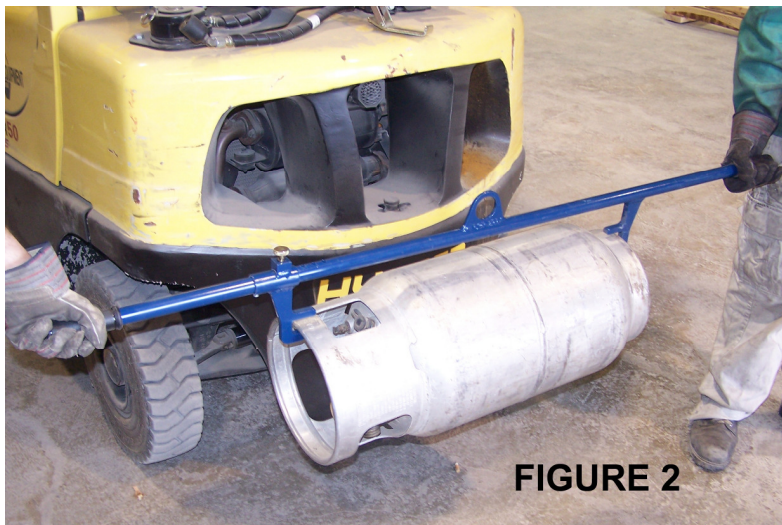


FIGURE 2

7. Install a new tank on the lifting tool by following steps 2 through 4 described above. Move the tank to the forklift or other equipment, and apply upward pressure to the detent pin and move the grab hook outward on the handle bar to release the tank.
8. Inspect the tool for defects and place it back into its proper place of storage.

SAFETY PRECAUTIONS:

WARNINGS: Noncompliance could cause injury to employees

CAUTIONS: Noncompliance could cause damage to equipment

NOTES: Pertinent information

1. **WARNING:** Wear personal protective equipment in accordance with Safety and General Conduct Rule 1040 as required.
2. **CAUTION:** Exceeding the rated weight capacity of this fixture could cause failure. Never use this device for any purpose other than removing or installing propane tanks.
3. **WARNING:** Keep your hands and fingers away from propane tanks during removal and installation.
4. **WARNING:** Make sure the forklift or other equipment is turned off and the parking brake set before attempting tank removal or installation. Keep the tanks away from open flames or sparks.